

BOLT DISTRIBUTION

South West

<u>PANEL POINT</u>	<u>No. of BOLTS</u>		<u>No. of POSITIONS</u>	<u>No. of BOLTS @ POSITIONS</u>
P.P. 2 to P.P.16	4 BOLTS	X	8	32
P.P. 18 to P.P.30	6 BOLTS	X	3	18
P.P. 32 to P.P.42	8 BOLTS	X	6	48
P.P. 48 to P.P.52	6 BOLTS	X	3	18
P.P. 54 to P.P.100	4 BOLTS	X	24	96

Sub-total = 236

North West

<u>PANEL POINT</u>	<u>No. of BOLTS</u>		<u>No. of POSITIONS</u>	<u>No. of BOLTS @ POSITIONS</u>
P.P. 2 to P.P.16	4 BOLTS	X	8	32
P.P. 18 to P.P.30	6 BOLTS	X	3	18
P.P. 32 to P.P.42	8 BOLTS	X	6	48
P.P. 48 to P.P.52	6 BOLTS	X	3	18
P.P. 54 to P.P.100	4 BOLTS	X	24	96

Sub-total = 236

South East

<u>PANEL POINT</u>	<u>No. of BOLTS</u>		<u>No. of POSITIONS</u>	<u>No. of BOLTS @ POSITIONS</u>
P.P. 2 to P.P.16	4 BOLTS	X	8	32
P.P. 18 to P.P.30	6 BOLTS	X	3	18
P.P. 32 to P.P.42	8 BOLTS	X	6	48
P.P. 48 to P.P.52	6 BOLTS	X	3	18
P.P. 54 to P.P.100	4 BOLTS	X	24	96

Sub-total = 236

North East

<u>PANEL POINT</u>	<u>No. of BOLTS</u>		<u>No. of POSITIONS</u>	<u>No. of BOLTS @ POSITIONS</u>
P.P. 2 to P.P.16	4 BOLTS	X	8	32
P.P. 18 to P.P.30	6 BOLTS	X	3	18
P.P. 32 to P.P.42	8 BOLTS	X	6	48
P.P. 48 to P.P.52	6 BOLTS	X	3	18
P.P. 54 to P.P.100	4 BOLTS	X	24	96

Sub-total = 236

Total Number of Bolts = 944
Total Number of Nuts = 1888